


Guide for proper hanging of Aluminum/Wood Braced mounted artworks.

What you should have received:

- Mounted print(s) with Aluminum or Wooden brace. (See pics. A)
- Z bar(For Aluminum Brace)
- Reverse Wood Cleat(For Wood Brace) (See pics. B)

What you will need:

- Screwgun/Drill
- Level
- Measuring Tape/Ruler
- Wall Achors (See pic. C)
- Dryall Screws
- Masonry Screws (if concrete/brick wall)

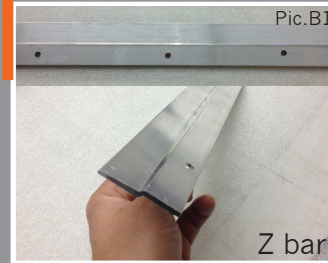

Keep artwork out of direct sunlight or exposed to moisture/ humidity or extreme temperatures.

Optimal viewing and display height is typically 5 ft. 6in. from the floor to the center of the artwork.



Measure and place cleat accordingly. Be sure to check that cleat is installed level using a standard level.

Securely install your cleat using wall achors and appropriate screws. Install the mounted artwork centered on the cleat. Carefully lift artwork up and out from wall above the cleat move down into postion onto cleat.(See pics. below)

Look on the sides of the installed artwork to ensure piece is fully seated on the cleat.

For larger prints with double cleats please ensure you use both cleats for hanging.

For artwork that is 30" x 40" or larger(or long term installations) we recommend aluminum braces as wood can warp over time.

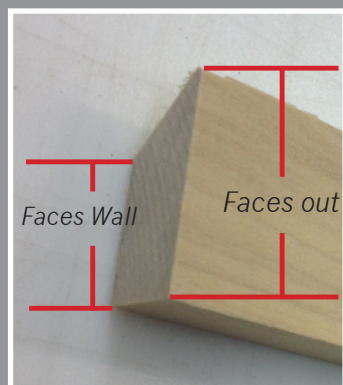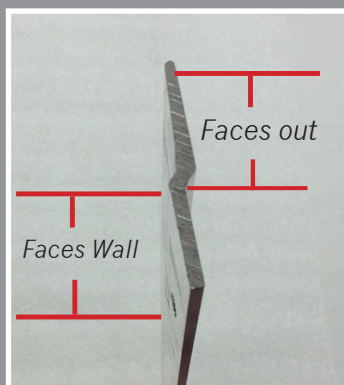

* Artwork should not hang above doorways or anyplace directly above where someone can pass.

** Hire a professional art installer for best and safest results.

Installations can be professionally done via our expert team at Duggal Visual Solutions.

DUGGAL[®]

www.duggal.com

212.242.7000